



# QUICK START GUIDE


## Tft60-399




NY Thermal Inc.  
 Tel: (506) 657-6000  
 Toll Free: 1-800-688-2575  
 Fax: 1-506-432-1135  
 Web: www.ntiboilertech.com  
 Email: info@nythermal.com



### Line Voltage Wiring

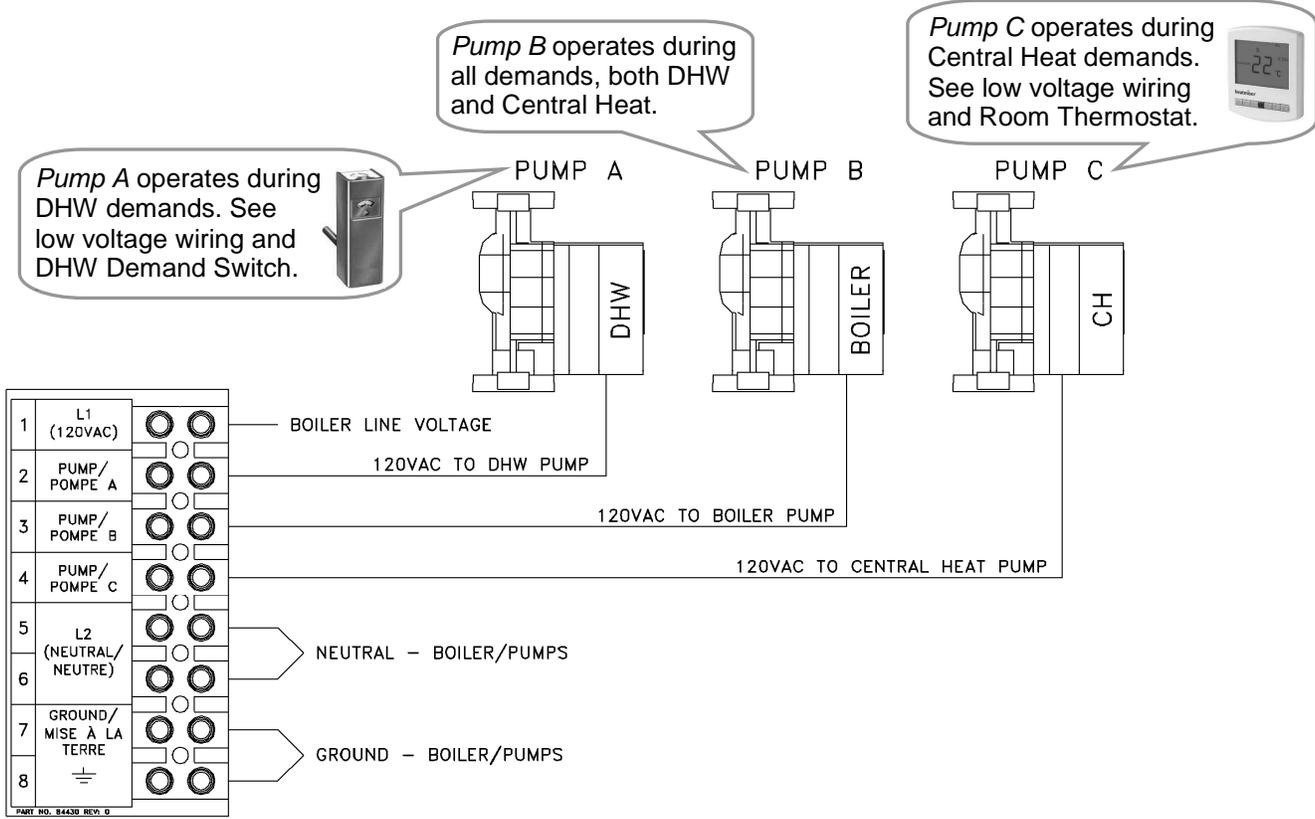

### Low Voltage Wiring

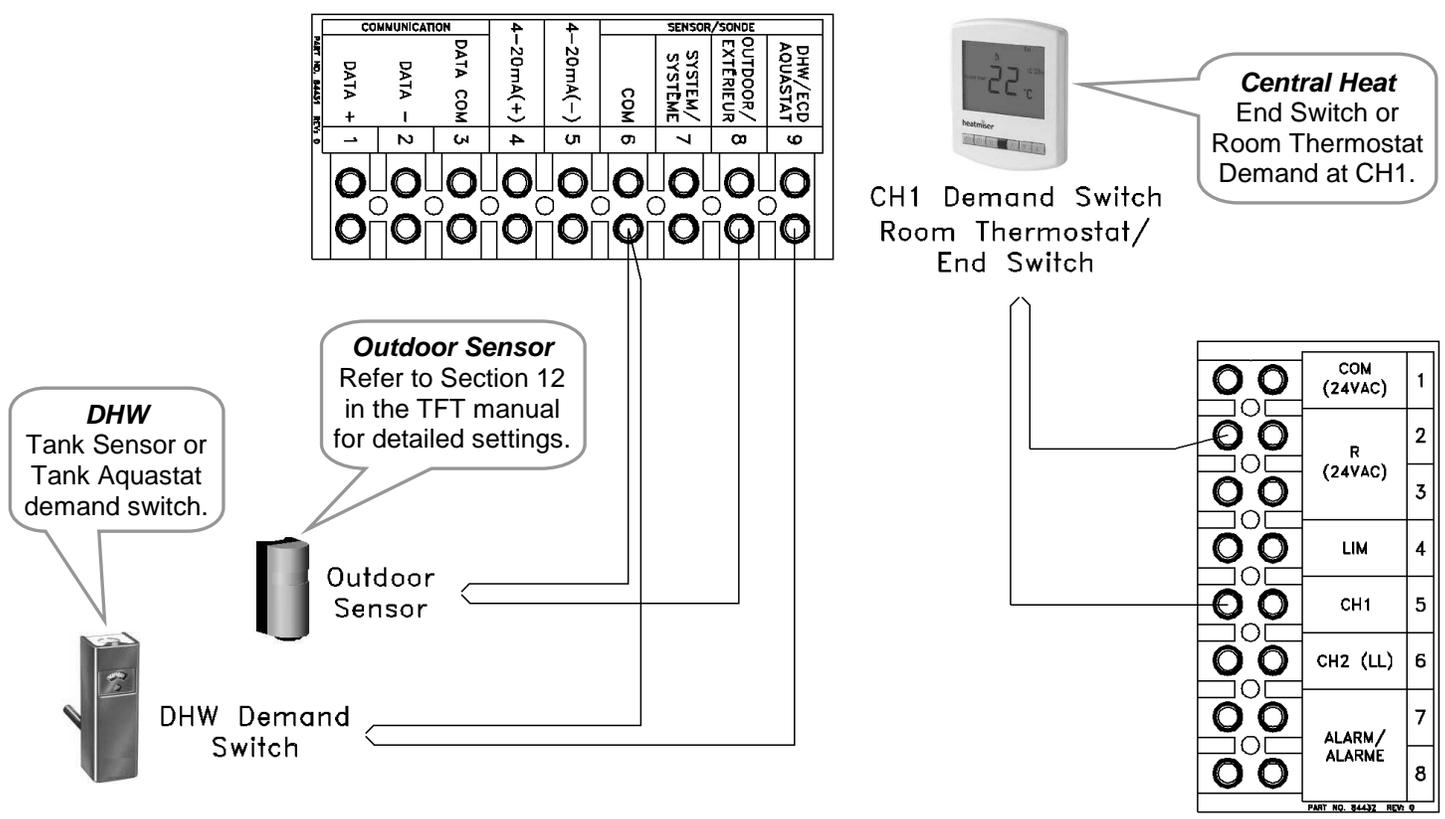

## Navigating the Touch Screen Display

**1** Date/Time

**2**

**3** Touch to return to Home screen

**4** Home Summary

**5** Config Menu

**6** Change settings in a Config Group by selecting it from the Configuration Menu.

## Central Heat Settings

**1**

**2** LCI = CH1 Thermostat input. See manual for options. ► Next Page.

**3** Change the default Setpoint to match the Heating System Type (see table below).



Heating System Type	Application	Temp Ranges
Fin Tube Baseboard	High Temp	160F - 190F
Cast Iron Radiators	Medium Temp	135F - 155F
In Floor Radiant	Low Temp	100F - 130F

\* It is the Installer's responsibility to choose an appropriate setpoint.





**4** Touch to return to previous screen

Return to the Config Menu once settings have been changed.




## Outdoor Reset Settings

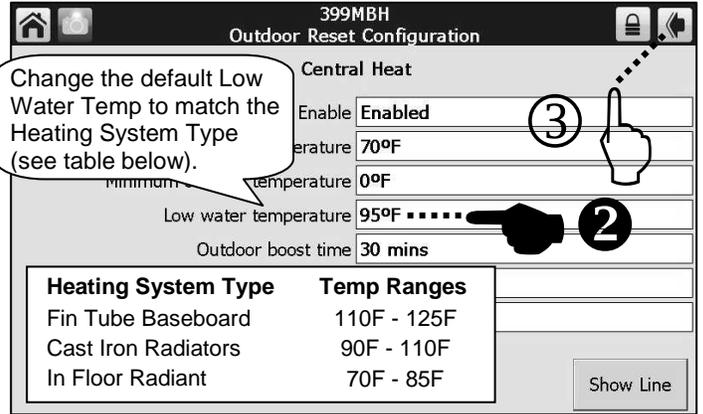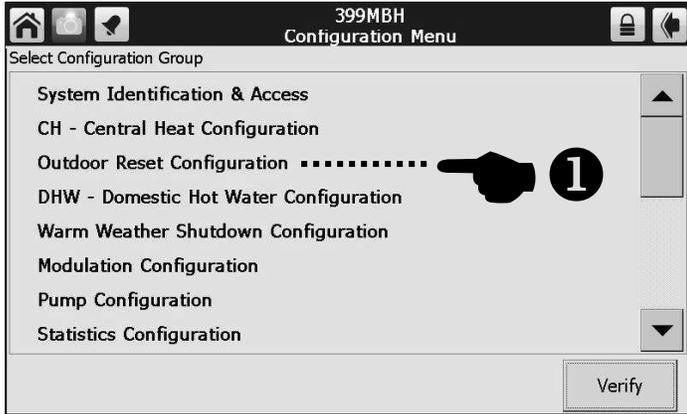


## Domestic Hot Water Settings

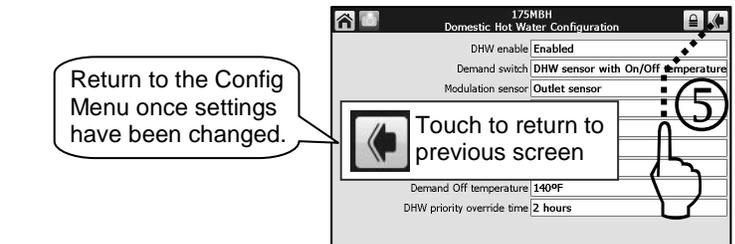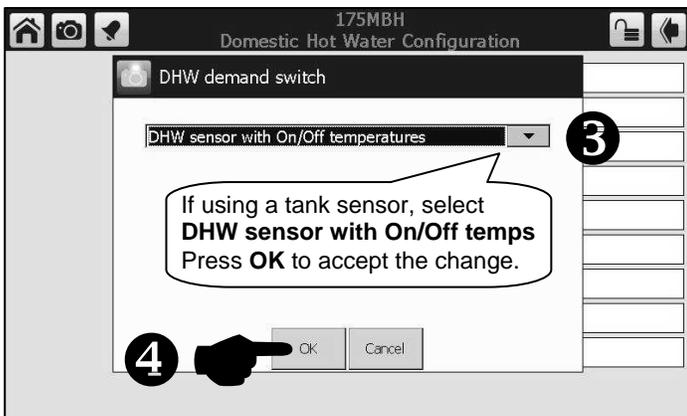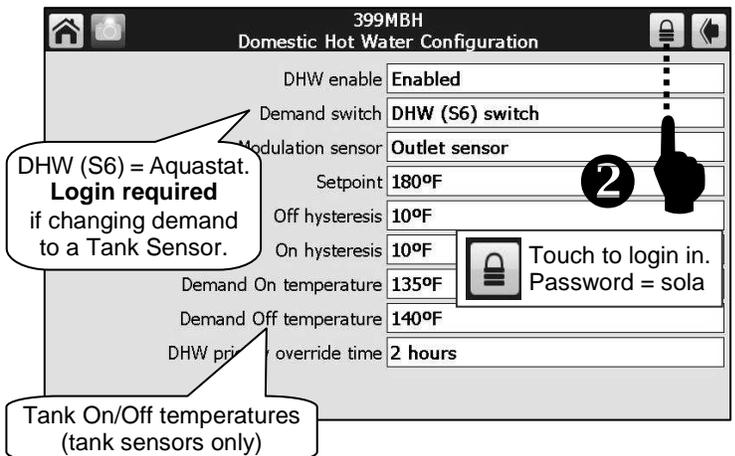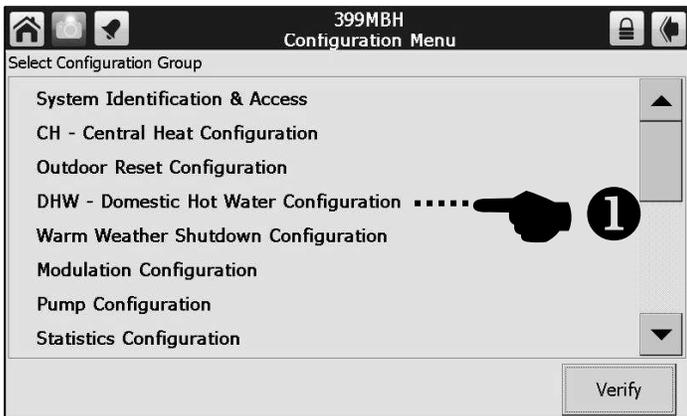


## Warm Weather Shutdown Settings

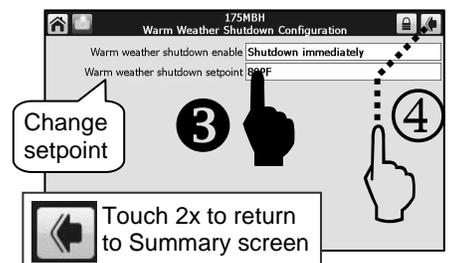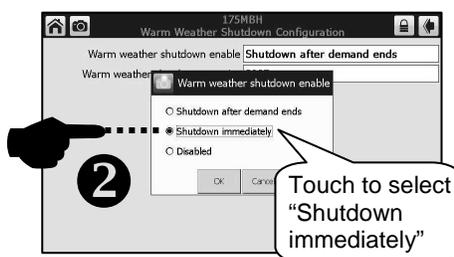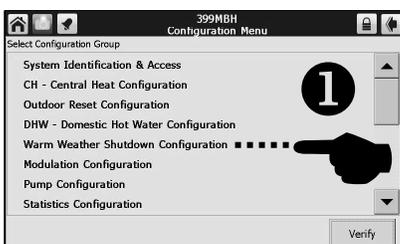


**Tft60-110 Connections**

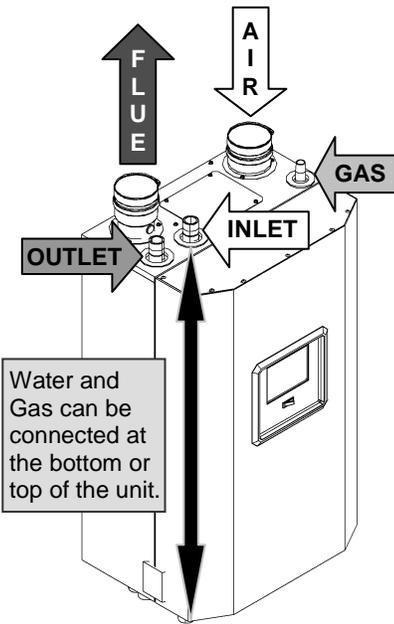

**Connections Tft155-250**

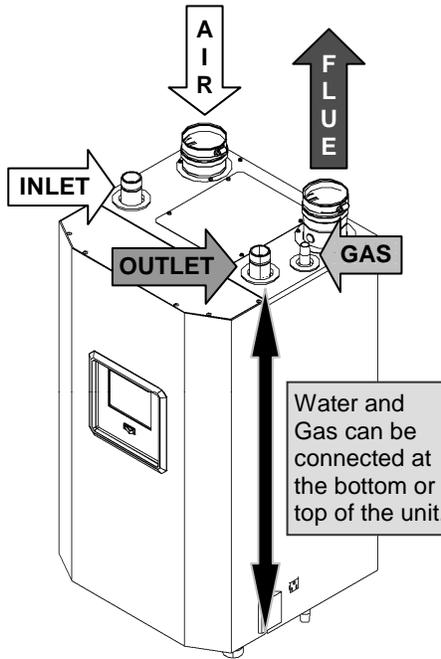

**Tft300-399 Connections**

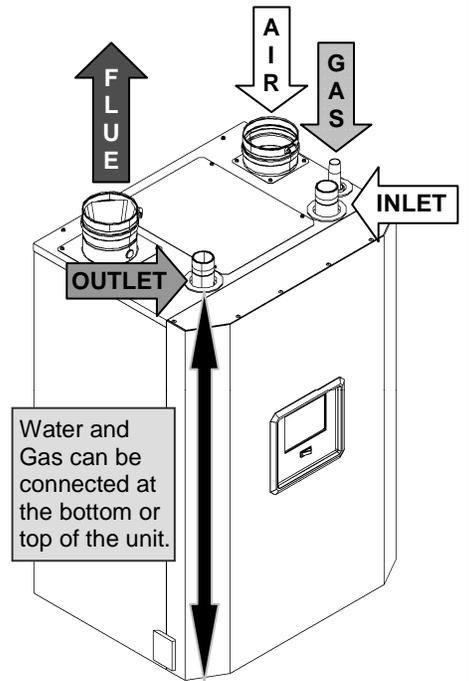

**Wall Mounting | Common**

